Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Close the appliance door, press the on/off button to turn on the appliance.

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Select the desired programme and its indicator will light up. Press Start/Pause, and the dishwasher programme will resume

6 Start your dishwasher

- Close the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance

- Turn off the appliance using the [on/off] button

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Bottom basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator

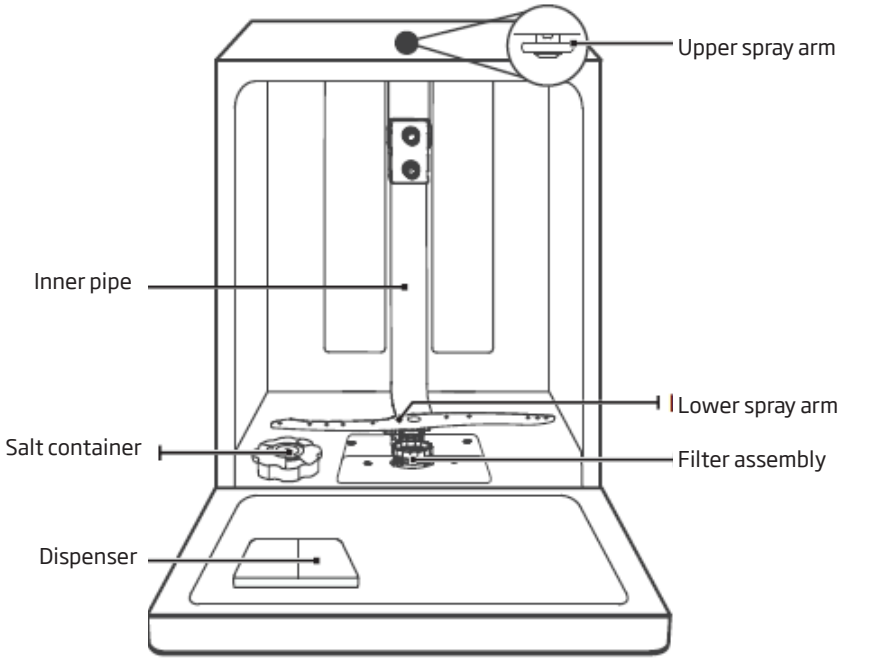

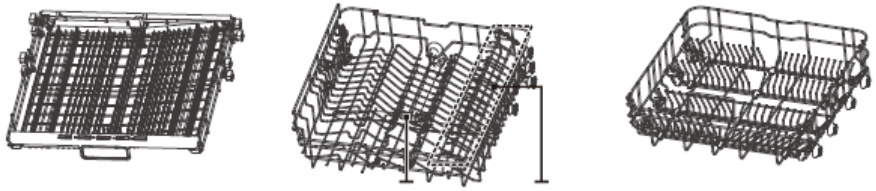

Cutlery rack

Upper spray arm

Cup rack

Lower basket

Upper basket

TABLE OF WASH PROGRAMMES: ZWM627WH / ZWM627IH

ITEM	Programme name	The default temperature [°C]	Type of soil	Amount of detergent	Type of cycle						Duration [minutes]*	Power consumption [kWh]*	Water consumption (l)*
1	Auto AUTO	55-65°	Automatic programme selection for any type of soil, including residual dried food on the dishes.	4g/18g (1 or 2 items)	Pre-wash 45°C	Automatic wash 55-65°C	Rinse	Rinse 50-55°C	Dry		85-150	1.050-1.551	10.6-15.9
2	Intensive	60°	Heavily soiled dishes with dried food reside.	4g/18g (1 or 2 items)	Pre-wash 50°C	Wash 60°C	Rinse	Rinse	Rinse 70°C	Dry	205	1.651	16.5
3	Hygiene +	70°	When you select the Hygiene programme, the water temperature will reach 70°C, which ensures that your dishes will be bacteria-free.	4g/18g (1 or 2 items)	Pre-wash 50°C	Wash 70°C	Rinse	Rinse 70°C	Dry		200	1.772	16.5
4	**ECO ECO	45°	Lightly soiled glass-ware and porcelain.	4g/18g (1 or 2 items)	Pre-wash	Wash 45°C	Rinse 65°C	Dry			198	0.849	10.0
5	Complete 60' 60'	55°	For normally soiled loads that need a quick wash.	22g (1 tablet)	Wash 55°C	Rinse	Rinse 50°C	Dry			60	0.853	11.5
6	Delicate	50°	For lightly soiled crockery and glass.	4g/18g (1 tablet)	Pre-wash 40°C	Wash 50°C	Rinse	Rinse 50°C	Dry		120	0.902	13.5
7	Quick 30'	40°	For lightly soiled tableware such as glasses, crystal glasses and fragile porcelain, etc.	12 g (1 tablet)	Wash 40°C	Rinse 40°C	Rinse 55°C				30	0.781	11.0

** Standard programme This is a reference program for research institutes. Tests according to EN 60436.
This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.